LITTLE BLUE NRD GRASS DRILL GUIDANCE SHEET



Lift: Hydraulic

Towing: Donahue Trailer with pins



2008 12' Strobel Industries
Total Width: 14'
Seeding Width: 11.66'
Row Spacing: 7" x 20"
Lift: Hydraulic or Hand Ratchet
Towing: Strobel Trailer with 2 5/16'
Ball (supplied) or receiver adapter hitch

The drills have two seed boxes. The larger box is for fluffy native grasses (Indiangrass, big and little bluestem, side-oats grama, wheatgrass, etc.); larger cool season grass (brome, orchard, buffalo); small grains (oats or wheat as cover crops).

The smaller box is used for legumes and alfalfa; reeds canary or switch grass seed if kept separate when planted as part of a native grass mixture.

Both drills have slide guide settings for the small and large boxes. The seeding chart is found on the inside of the cover lids.

For availability and current rental price contact the NRD office at 402-364-2145

A signed Equipment Use Agreement & Release form is required before the drill may leave the NRD premises

A \$500 deposit check made out to the Little Blue NRD is required as security for the equipment when the drill is picked up.



Strobel Grassland Drill and Trailer Information

A 2 5/16" ball and receiver adapter hitch (supplied by the NRD) is required on the pickup to operate this unit. If this hitch is not returned with the drill there will be a \$40 fee accessed to the renter of the drill.

Unloading drill from trailer instructions

- Position drill on the level near where it will be used
- Block wheels with provided wheel stops in front of the trailer axles (figure 1)
- Remove the four pins on the trailer deck, two pins per side (figure 2)
- Pull trailer forward until trailer drops downs (figure 3)
- Remove a big pin by receiver hitch (figure 4)
- Again pull trailer forward and deck will be flat on the ground (figure 3)
- Unfold trailer ramps and hook up tractor to drill (figure 5)
- Remove tongue support and wheel straps (figure 6 & 7)
- Pull drill off trailer
- Be extremely careful!



Figure 2

Figure 3



Figure 6

Reloading instructions

- Reverse unloading instructions, but place wheel stops **behind** trailer tires
- Be sure the wheel packers on the back of the drill will clear the left-hand side of the trailer tire

Figure 4

Figure 7

Failure to do so will result in full payment of repair to any damaged packer







Figure 1



Figure 5